




6x4ft DOG KENNEL

DELIVERED FLAT PACKED
EASY TO INSTALL SECTIONS...

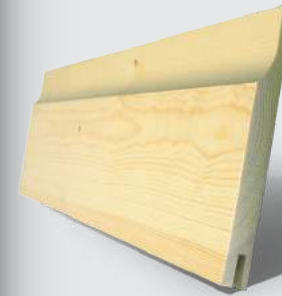

Pressure Treated
Tanalised Timber for
Longer Lasting Life!



PRESSURE TREATED TANALISED TIMBER

ASSEMBLY MANUAL

SHEDS • SUMMER HOUSES • KENNELS

Total Sheds • 28 Charles Street,
Willenhall, WV13 1HG
Tel: 01902 636 529
Email: info@totalsheds.co.uk




Kennel with Run Area

Requires a minimum build area.*
Please see details below.



*Actual finished dimension area 74" x 48"

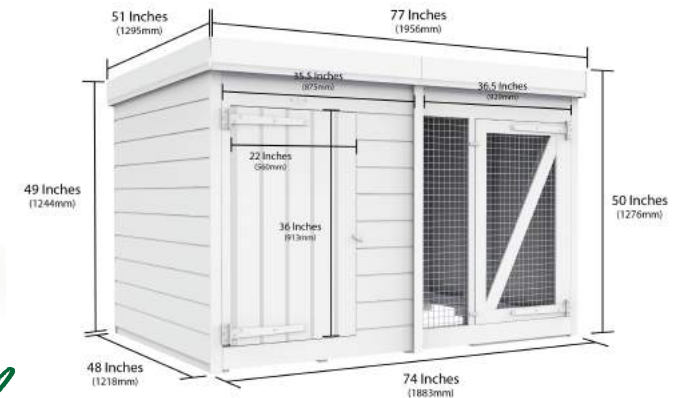

Ready to Build Dog Kennel

Contents are in assembling order.

6x4ft Dog Kennel Check List

Your delivery should contain the following:



2 Persons Required



Pressure Treated Timber

Thank you for purchasing your Dog Kennel from Total Sheds.

All of our Kennels are made from only the finest selected timber which are (Tanalised), specially pressure treated for a longer and lasting durable life span to the elements.

PLEASE NOTE: Use extreme caution when using any tools. Always wear safety gear where necessary. It is advisable that at least 2 or more persons assemble the kennel for health and safety purpose. We are not responsible for any injuries caused whilst assembling this kennel.



DELIVERED FLAT PACKED EASY TO INSTALL SECTIONS...

Each Kennel is carefully prepared in sections. Making the assembly process as easy as possible for you. Please follow our simple step-by-step guide and have your dogs new home built in no time!

Tools Required to Assemble:




1X Kennel Floor



Page 3

2X Side Blocks

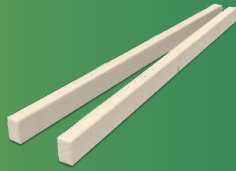

Page 3

2X Back Panels



Page 4 & 5

1X Side Panel Left



Page 4

1X Pop Hole



Page 5

1X Side Panel Right




Page 6

1X Front Left



Page 6

1X Front Right

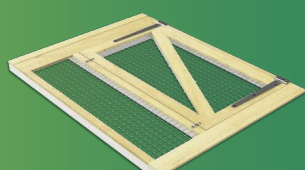

Page 7

2X Roofs Panels




Page 7 & 8

6X Corner Strips



Page 8

2X 7ft Roof Felts

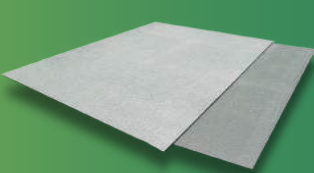

Page 9

6X Felt Strips



Page 9

Supplied with 4.0 x 70mm EASY DRILL SCREWS



Total Sheds • 28 Charles Street, Willenhall, WV13 1HG • Tel: 01902 636 529
Email: info@totalsheds.co.uk

www.totalsheds.co.uk

Total Sheds **STEP • 1**

SET THE KENNEL FOUNDATION

KENNEL FLOOR BASE

Set the base for the kennel floor to build on.

Place floor down into the required position/area. (7x5sqft recommended)

TIPS & ADVICE: It is always good to position your kennel on a solid foundation.

Slabs or Concrete areas are ideal.



Total Sheds **STEP • 2**

FLOOR BLOCK x1

ATTACH FLOOR BLOCK 1



Screw in to left of floor side as shown.



FIX SIDE POST TO FLOOR EDGE WITH LARGE SCREWS


Floor Block
63mm x 38mm

Please Note: 2nd Floor Block can be sawn down in to sections to support floating panels as shown later on in build.

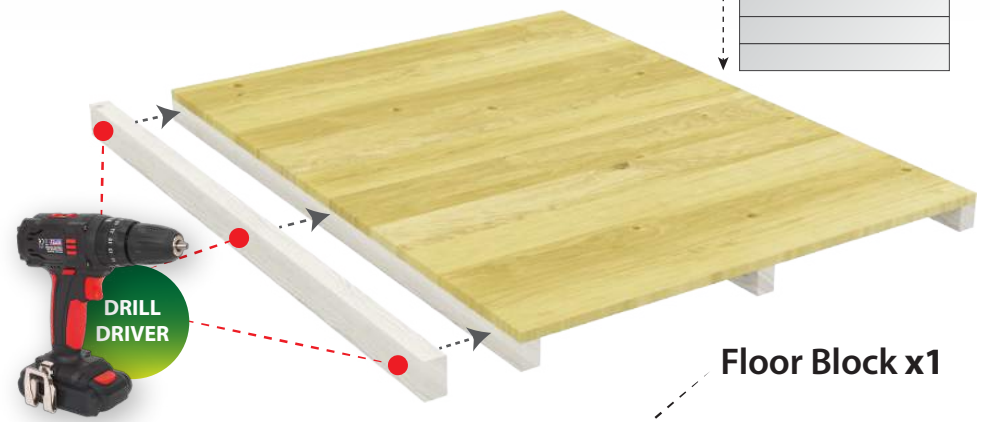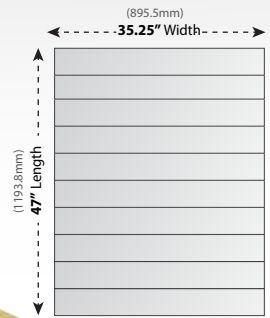

x3
4.0 x 70mm

• = Drill Points using screws provided as shown

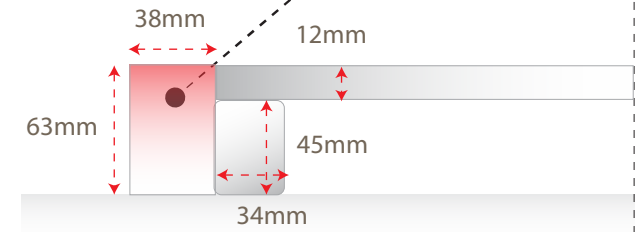




STEP 3

ATTACH BACK PANEL 1 of 2

Position Back Panel 1

Set within the floor planks, sitting off the rear edge.

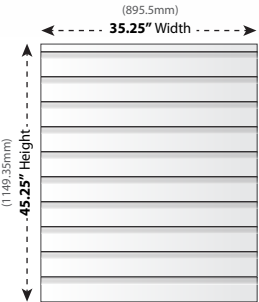

DO NOT SCREW DOWN THE PANELS TO FLOOR JUST YET!
Screw only the vertical panels to create a standing frame first, allowing room for adjustments.




STEP 4


LEFT SIDE PANEL

Position Left Side Panel

Now place the Left Side Panel flush against the Back Panel Post.

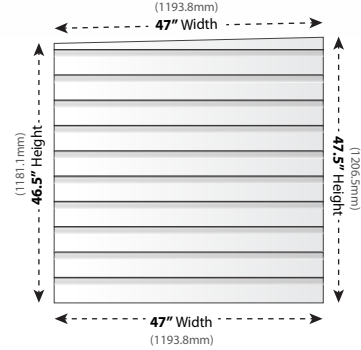

Set side panel left against back panel post as shown on this image.

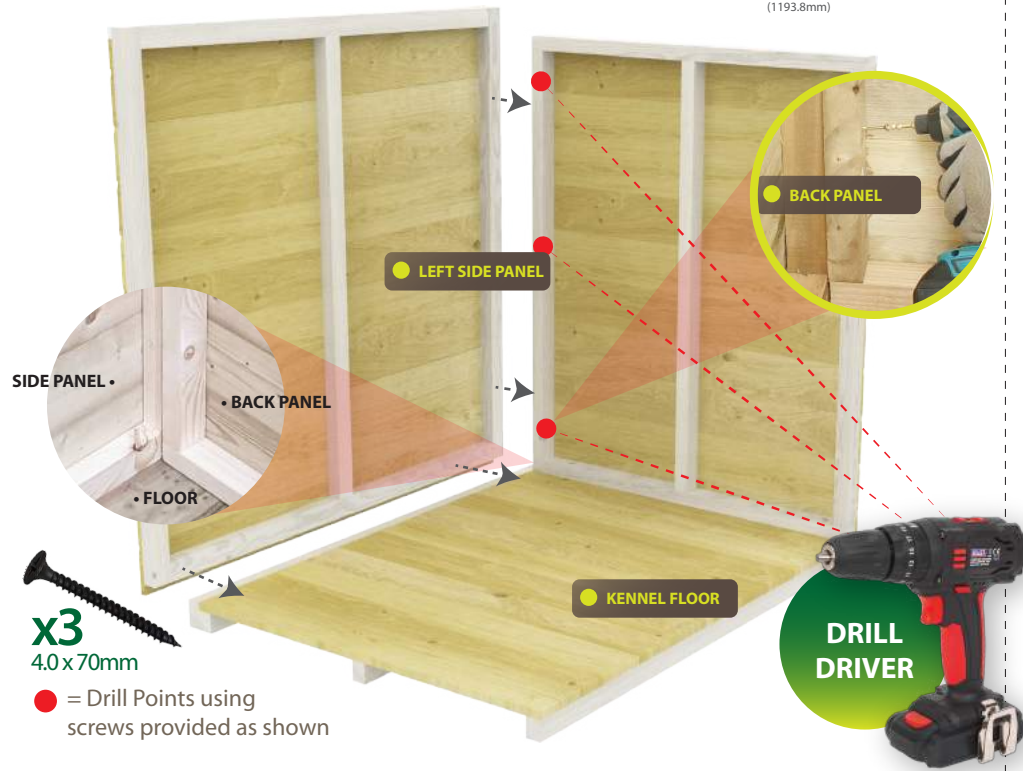

x3
4.0 x 70mm

• = Drill Points using screws provided as shown




STEP • 5


ATTACH BACK PANEL 2 of 2

Attach Back Panel 2

Use the 2nd Floor Block to raise the back panel height then screw against 1st panel side.

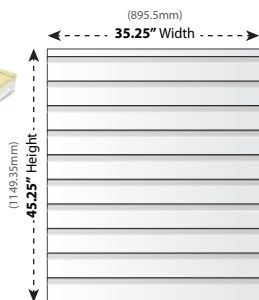

Position the 2nd back panel in place as shown on diagram below. The back panel 2 must be the same height as the 1st back panel which is 63mm from the ground to back panel frame bottom.

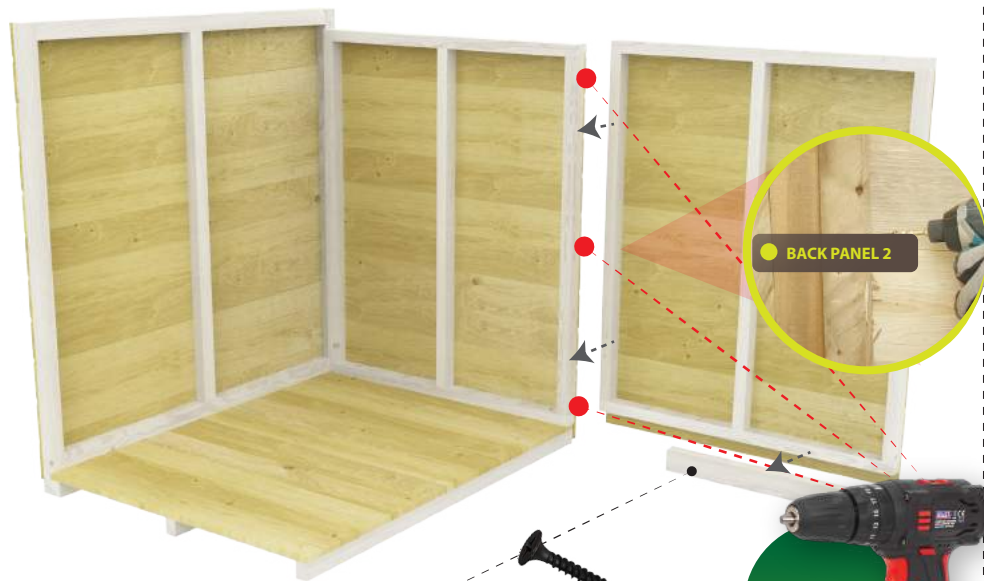

x3
4.0 x 70mm

• = Drill Points using screws provided as shown



DRILL DRIVER

Using the Floor Block Posts, elevate the 2nd back panel and screw in sides to secure againsts the 1st back panel side post as shown here.




STEP • 6

POP HOLE


Place Pop Hole Panel

Set within the floor planks sitting flush with front and rear panel edges and floor.

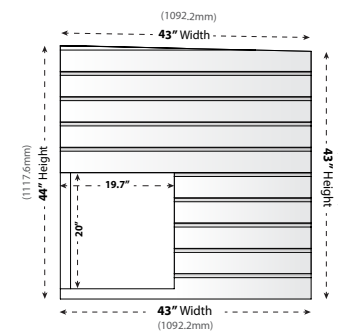

x3
4.0 x 70mm

• = Drill Points using screws provided as shown

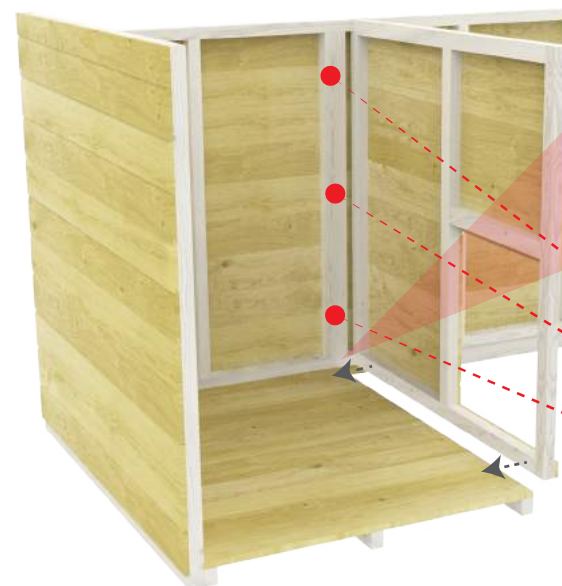

• POP HOLE



DRILL DRIVER



STEP 7

RIGHT SIDE PANEL



Attach Right Side Panel

Now attach the Right Side Panel by placing against 2nd back panel side as below.



x3
4.0 x 70mm

● = Drill Points using screws provided as shown

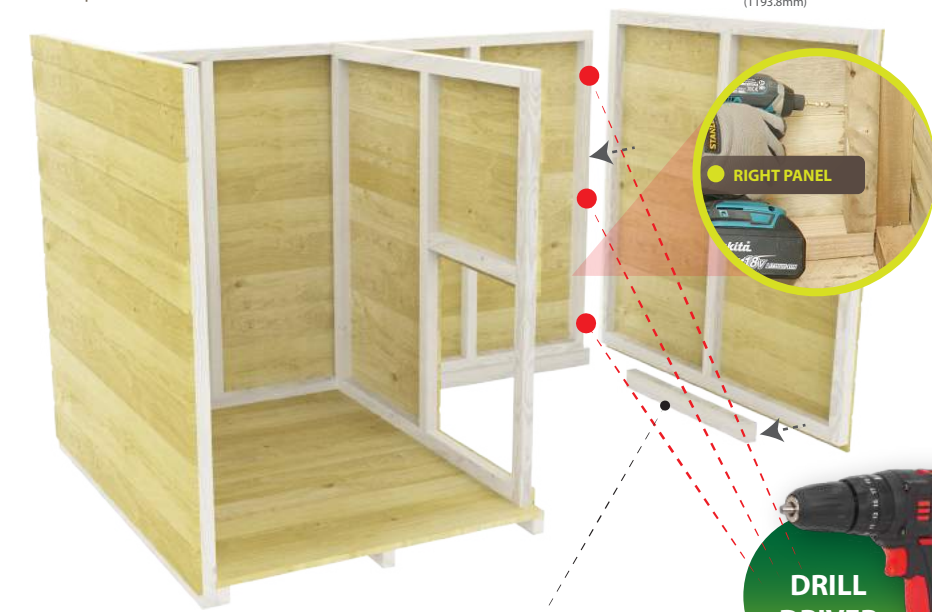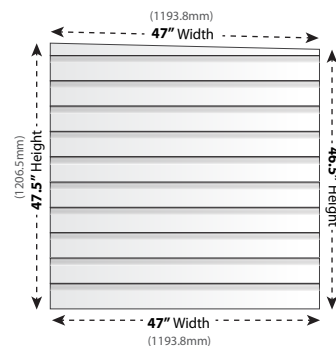

DRILL DRIVER

Using the Floor Block Posts, elevate the right side panel and screw in sides to secure againsts the 2nd back panel side post as shown.



STEP 8

ATTACH BACK FRONT PANEL A


Front Door Panel

Now set the 1st of the front panels. Position the solid door panel like below.



x6
4.0 x 70mm

● = Drill Points using screws provided as shown

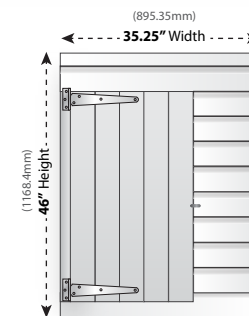

DRILL DRIVER





STEP • 9

ATTACH BACK FRONT PANEL A

Front Mesh Panel

Now place the front mesh right panel in between the front left and right side panels.

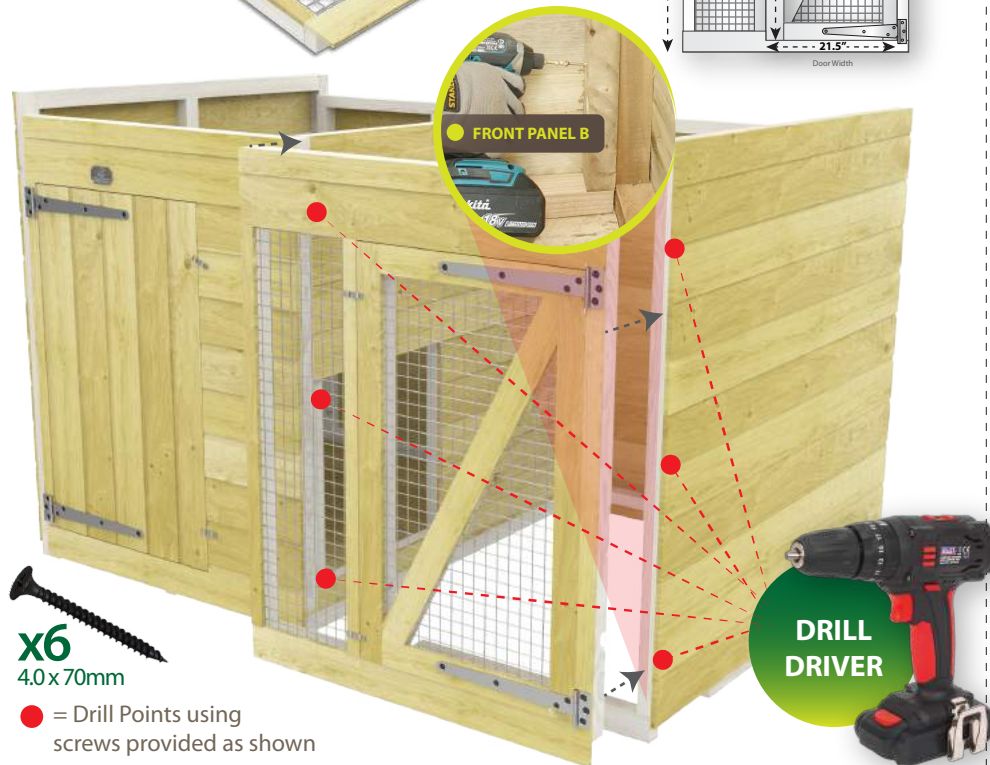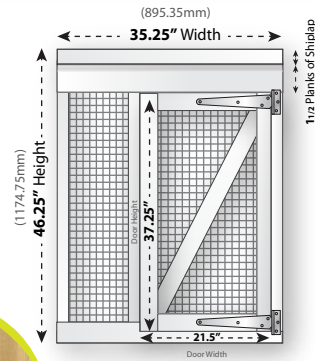

X6
4.0x70mm

● = Drill Points using screws provided as shown

DRILL DRIVER



STEP • 10

PLACE ROOF SECTION 1


1st Roof Section

Now place the 1st of the 2 roof panels as shown in the diagram below.



x4
4.0x70mm

● = Drill Points using screws provided as shown

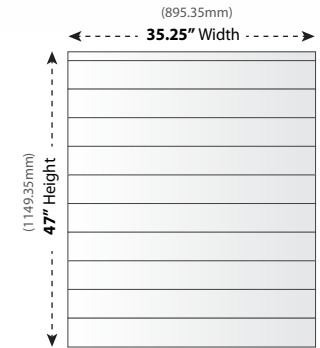

DRILL DRIVER

Secure roof panels by screwing them down to kennel framework as shown.


PLACE ROOF SECTION 2

2nd Roof Section

Now place the 2nd roof panel as shown in the diagram below.



Now secure down the roof and the base adjusting where need be to make final structure safe & solid.

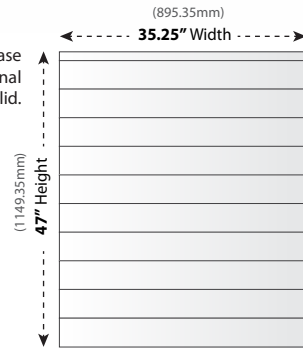

x4
4.0 x 70mm

● = Drill Points using screws provided as shown




DRILL DRIVER

Secure roof panels by screwing them down to kennel framework as shown.


SIDE STRIPS

Attach Corner Strips

Now finish off the panels edges with the corner strips provided.

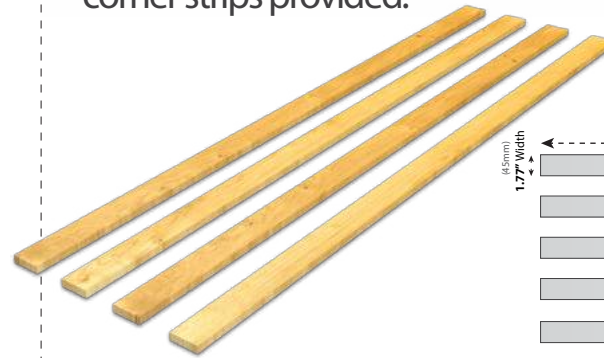

x6

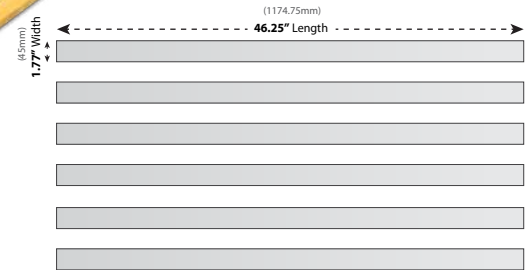

x12
4.0 x 70mm

● = Drill Points using screws provided as shown

DRILL DRIVER



STEP • 13



APPLY ROOF FELT SHEETS x3

40kg Mineral Felt Roof

You will be provided with 2 lengths of high quality roof felt. Start with lower end of roof first.




1st Sheet at rear of roof

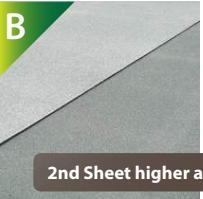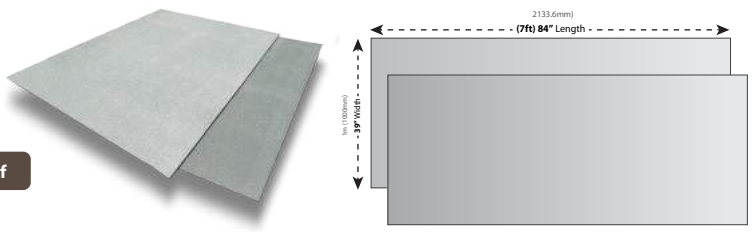

2nd Sheet higher above

Proceed with 1st layer at the rear lowest point of roof, then overlay with 2nd felt layer.

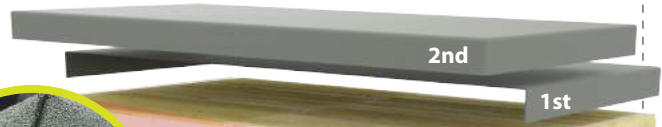

Trim edges with 3" over



Fold & tack edges neatly



TACKS PROVIDED

After cutting away the excess felt, neatly fold over the edges and secure each section down by tacking them to the kennel sides. **PROTECT YOUR KENNEL AGAINST THE RAIN & ELEMENTS.**

Carefully check all the panels are fitted well and the kennel is secure and stable.

You are almost done building your kennel!



STANLEY KNIFE



HAMMER



STEP • 14



FINISH OFF WITH FELT STRIPS

Finishing Touches!


To hide the tacked felt edges add the felt strips along the top edge of roof as shown.



*Sections may come longer than required. Please saw down.

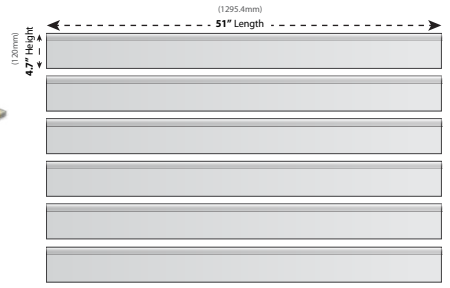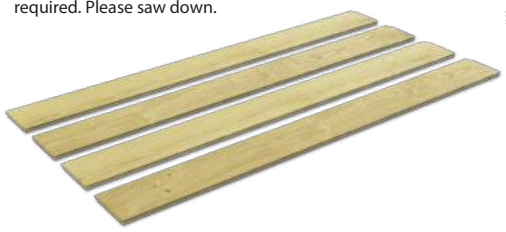

Create a neat and tidy roof finish hiding the rough edges and tacks. Measure the sides for a perfect cut and finish!

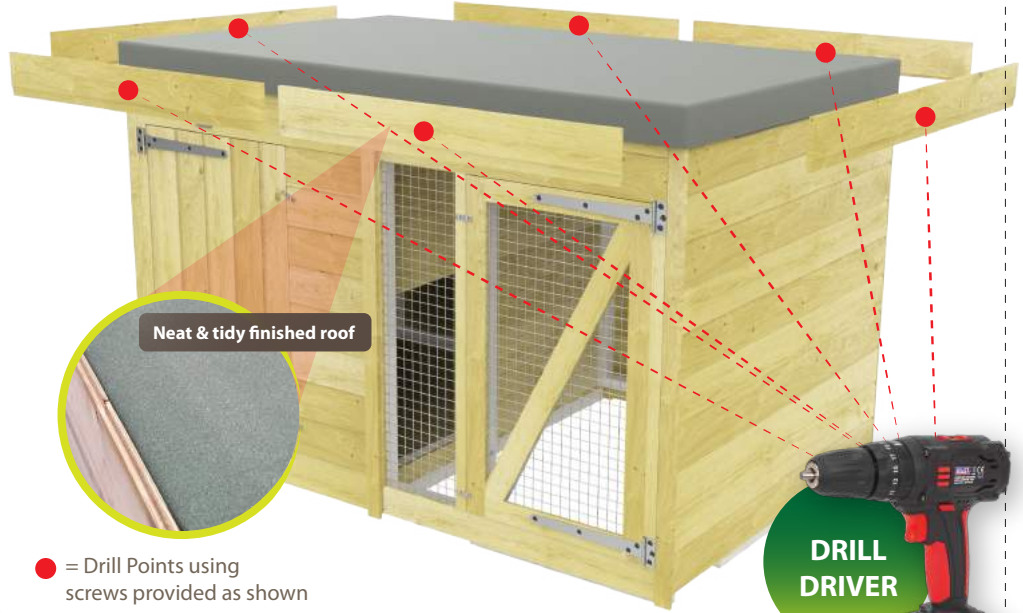

Neat & tidy finished roof

• = Drill Points using screws provided as shown

You may use **Optional Diamond Cap** to cover felt strip join
CONGRATULATIONS - YOUR DONE!



DRILL DRIVER